
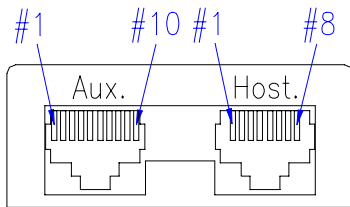


Z-6082 Series Dual-Laser Omnidirectional Vertical Scanner

1. Z-6082 MULTI-INTERFACE DUAL-LASER OMNI-DIRECTIONAL SCANNER

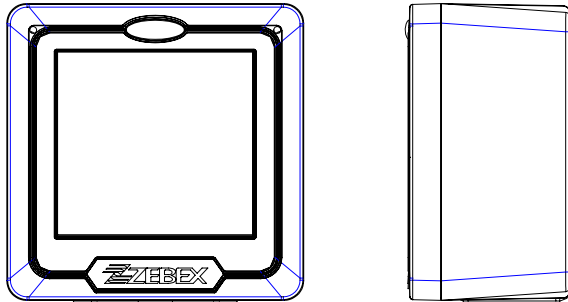


Auxiliary Port RS232 IN only	
Pin	Function
1	NC
2	NC
3	+5V output. 150mA max.
4	RTS_ Out
5	Ground
6	TXD_ Out
7	RXD_ In
8	NC
9	CTS_ In
10	NC

Host Port (RS-232/Keyboard Wedge)		
Pin	Host Function	
	Keyboard Wedge	RS-232C
1	DC + 5V input	
2	Keyboard Clock	N.C.
3	PC Clock	RTS_CMOS
4	Ground	
5	N.C.	TXD_CMOS
6	N.C.	RXD_CMOS
7	Keyboard Data	N.C.
8	PC Data	CTS_CMOS

MODEL NO	INTERFACE TYPE	STANDARD P/N	REMARK
Z-6082	RS-232C/CMOS KEYBOARD WEDGE USB	Z60-93380-82	Multi-interface


2. KEYBOARD WEDGE CABLE ADAPTER FOR PC/AT/PS/2

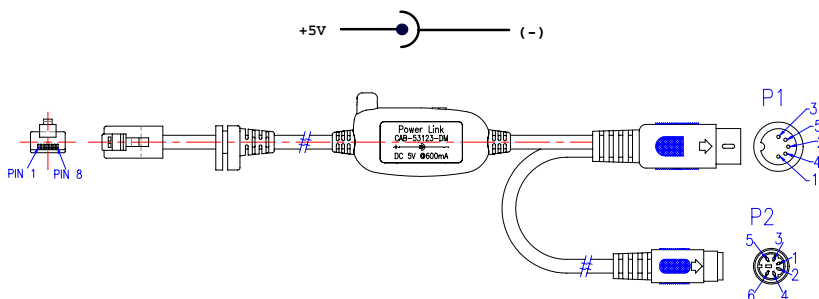

PIN-OUT CONFIGURATION			
P1-5DIN (M)		P2-MINI DIN (F)	
DIN	FUNCTION	DIN	FUNCTION
1.	PC Clock	1.	KB Clock
2.	PC Data	2.	N.C.
3.	N.C.	3.	GND
4.	GND	4.	+5V
5.	+5V	5.	KB Clock
		6.	N.C.

ZEBEX STD P/N CAB-53123-DM

DIN(F) TO MIN DIN(M)

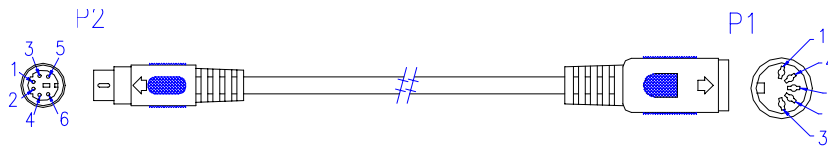


ZEBEX STD P/N CAB-50117-CA

PIN-OUT CONFIGURATION			
TO HOST		TO KB	
1.	DATA	1.	KB Data
2.	N.C.	2.	N.C.
3.	GND	3.	GND
4.	+5V	4.	+5V
5.	Clock	5.	KB Clock
6.	N.C.	6.	N.C.

3. RS-232C COMMUNICATION CABLE


DTE PINOUT

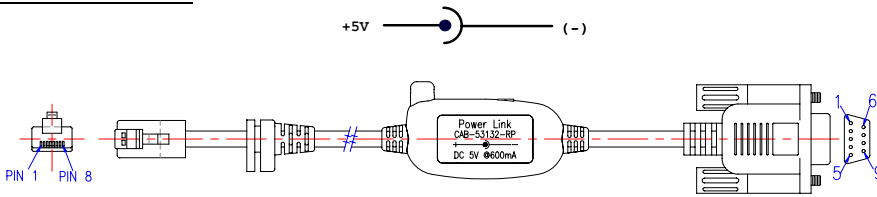

DB-9 (F)	FUNCTION
2	TX
3	RX
7	CTS
8	RTS
5	GND

ZEBEX STD P/N CAB-53132-RP


DCE PINOUT

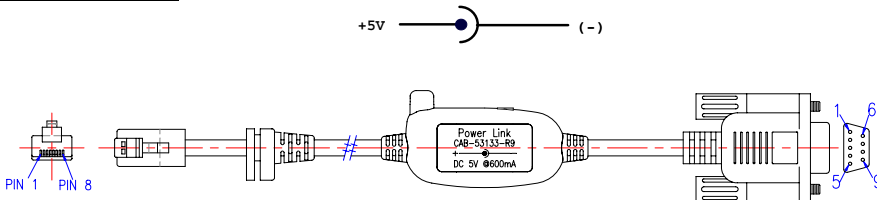

DB-9 (F)	FUNCTION
2	RX
3	TX
7	RTS
8	CTS
5	GND

ZEBEX STD P/N CAB-53133-R9

4. USB INTERFACE WITH TYPE A DETACHABLE CABLE

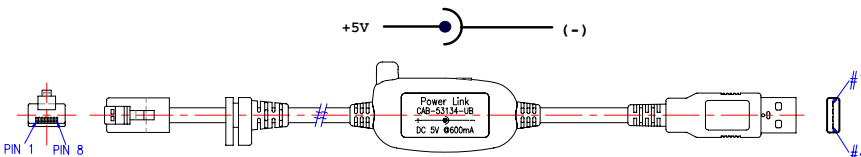

USB TYPE A Connector	Function
1.	VCC
2.	D-
3.	D+
4.	VSS


ZEBEX STD P/N CAB-53134-UB

NOTE:


- DTE: Data terminal equipment
- DCE: Data communication equipment
- Special Order Requirement:
ZEBEX is capable of supplying special cable that is not listed in this guide, given that customers provide detailed pin configurations. In addition, the minimum order quantity of a special cable is 50 pieces.
- Length of the cable is 6.5 feet (2 meter).

5. POWER ADAPTOR

PWO-90810-US

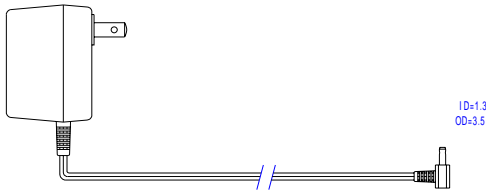

PWO-90811-EU

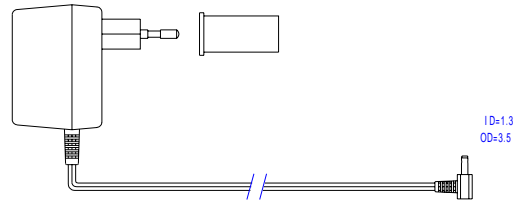

STD P/N	INPUT	OUTPUT	APPLICABLE REGIONS
PWO-90810-US	120VAC	5 VDC 650mA	N. America, Japan, Taiwan
PWO-90811-EU	230VAC	5VDC 650mA	Europe, Middle East, South East Asia, S. America

6. ORDER INSTRUCTIONS

1. Determine the type of cable to use.
2. Choose appropriate power adaptor.
3. If the required cable and/or power adaptor is not listed in this guide, please contact ZEBEX or your local ZEBEX reseller.

7. SELECTION EXAMPLE

If you need to connect the Z-6082 scanner through keyboard port to a PC, and you are located in Europe, please order:

Z60-93382-82+ CAB-53123-DM+CAB-50117-CA+PWO-90811-EU